

1089 en 1189 (with on/off switch)

User manual "Wireless magnetic switch"



Installation:

Install the bottom piece and the magnet using screws, double-sided tape or Velcro. First insert the PCB in the PCB supports and then press the PCB in place on the attachment clip (Fig. 1).

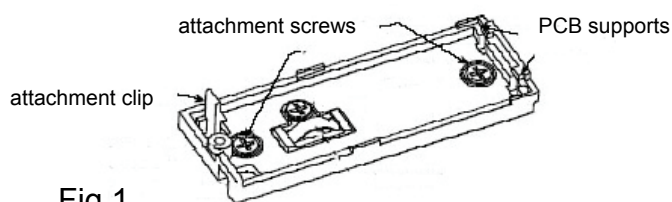


Fig.1

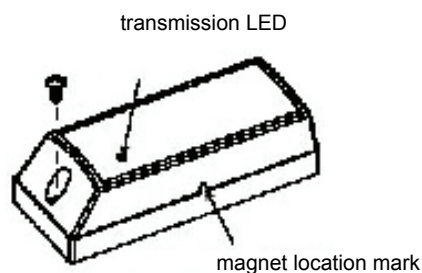


Fig.3

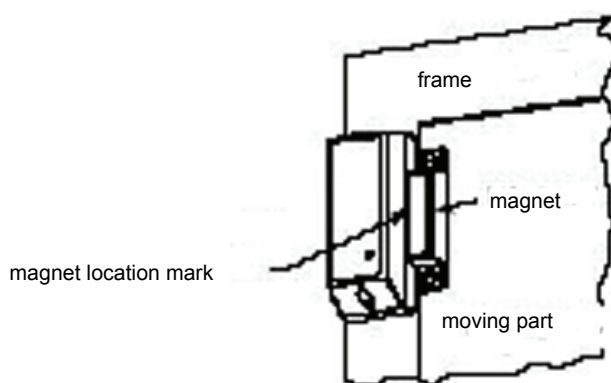


Fig.2

Make sure that the **magnet location mark** is on the side facing the magnet (Fig. 2 and Fig. 3). These wireless magnet switches can be configured to receivers 1311-1312 and pagers 5016-5032.

Tips

- To prevent an alarm from occurring when you leave the room, first open the door before switching on the receiver.
- Mounting a door switch on a steel door frame can influence the transmission range of the door switch.
- Always test after installation!